



HTC Wizard 100 Speakers Replacement

This guide will allow you to disassemble your phone and remove/replace the speaker.

Written By: Taylor Stone



INTRODUCTION

Make sure you complete previous guide.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Power the phone off.
- Use your thumb to gently press downward and away from the camera to remove the battery cover.

Step 2



- Pull on the plastic tab to release the battery.

Step 3 — Back Case

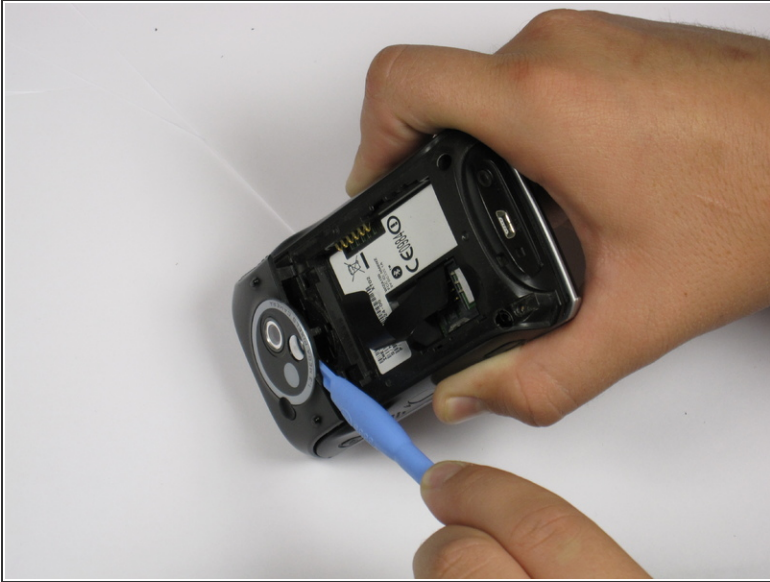

- Use a plastic opening tool to remove the camera cover.
- ⚠ Work around the corners to avoid breaking the plastic clips that hold the camera cover on.
- Lift the camera cover off of the phone.


Step 4





- Remove the stylus from the phone.
- Remove the four 5.5 mm screws with the T6 Torx Screwdriver.
- ⚠ One of the screws might be under a sticker, which will void your warranty.

Step 5



 **Be Careful!** Do not insert the spudger in between the keyboard and screen. This could break the keyboard off the phone.

-  If your phone contains a memory card, you may want to remove it before proceeding with this step.
- Insert spudger in the bottom corner as seen in the picture. Carefully slide the spudger from the bottom towards the top as seen in the second picture.
- Lift the back case off completely.
-  The speakers might be dangling and unsecured.

Step 6 — Speakers



- Grip the speaker connector with your thumb and finger and gently pull up.
- Repeat for 2nd speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 03:43:43 PM.